




XLC Series B1 (Touring) Grid Assembly and Installation Instructions



Use these configurations for any XLC Array:

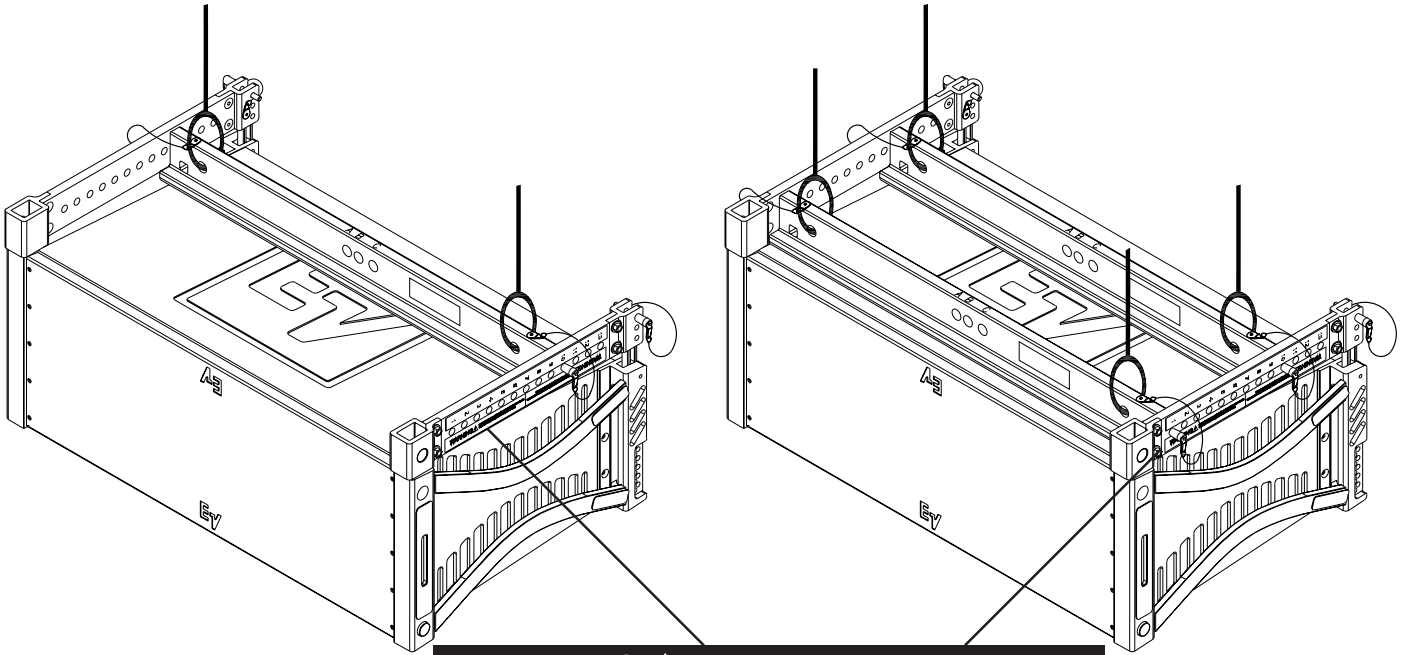


WARNING DO NOT LIFT GRID OVERHEAD USING THESE SIDE HOLES. ONLY LIFT GRID FROM THE SUPPLIED SPREADER BAR(S).

Single Bar/Dual Pull = Use Outer Holes

Dual Bar/Dual Pull = Use Outer Holes


Use these configurations for XLC127+, XLC127, XLC118 or XLC215 Arrays:

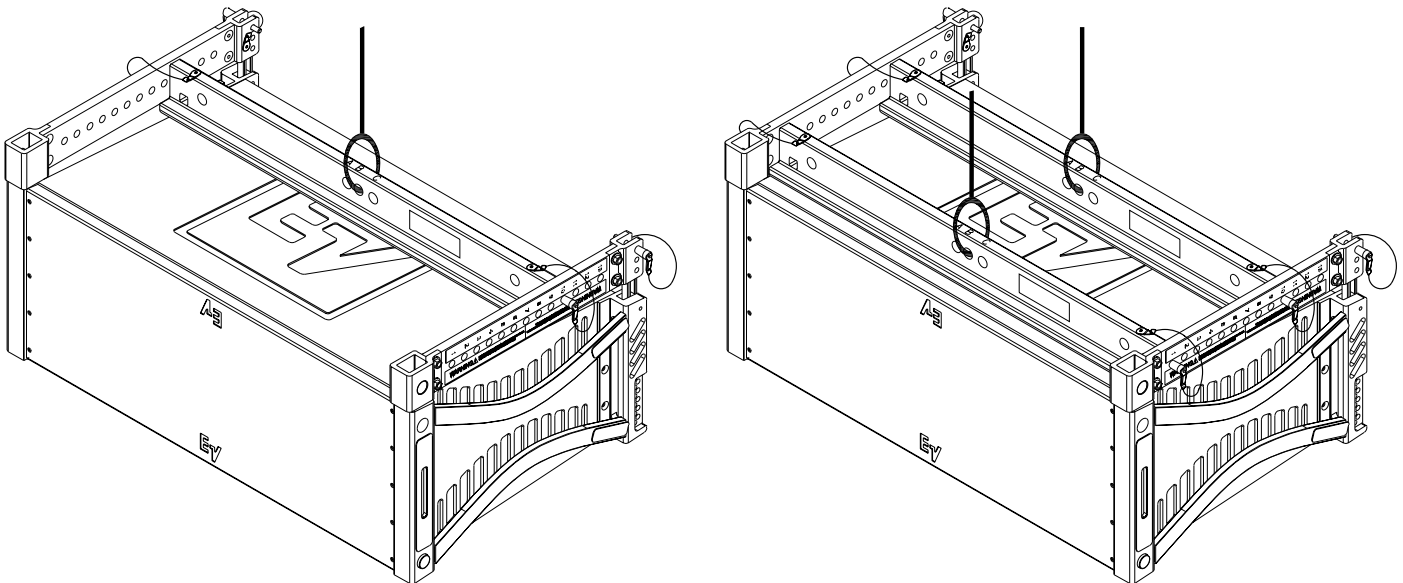


Single Bar/Single Pull = Use Hole "B"

Dual Bar/Single Pull = Use Hole "B"

Use these configurations for an XLC127DVX Array Only:

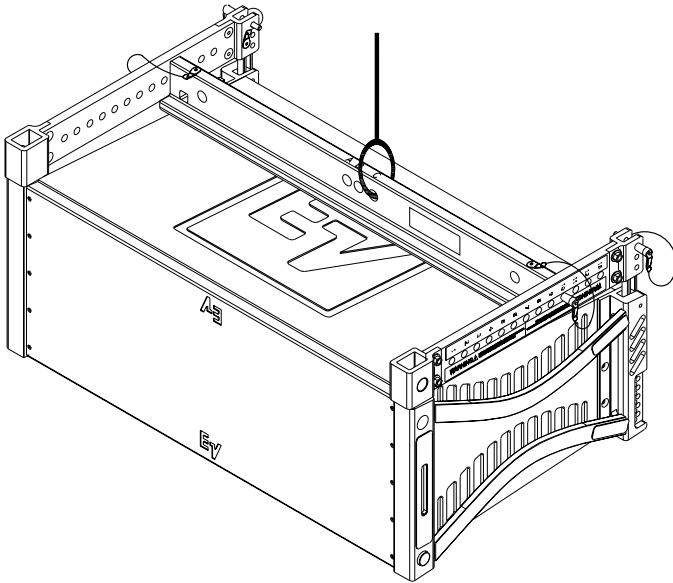


Single Bar/Single Pull = Use Hole "C"

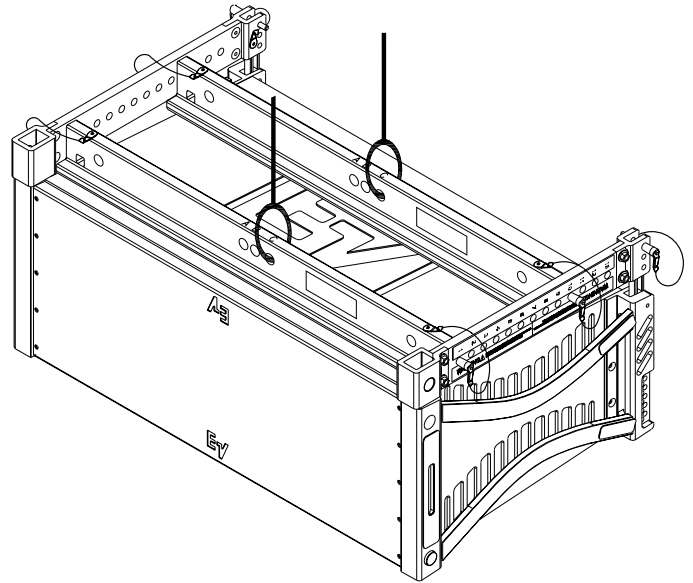


Dual Bar/Single Pull = Use Hole "C"

Use these configurations for XLC127DVX with XLC118 or XLC215 mixed in the same array:

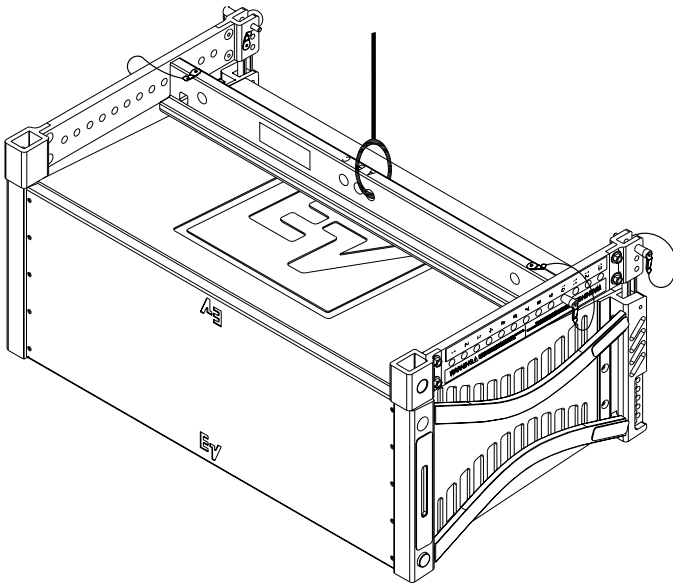

Single Bar/Single Pull = Use Hole "A"
(Note that the bar is reversed)

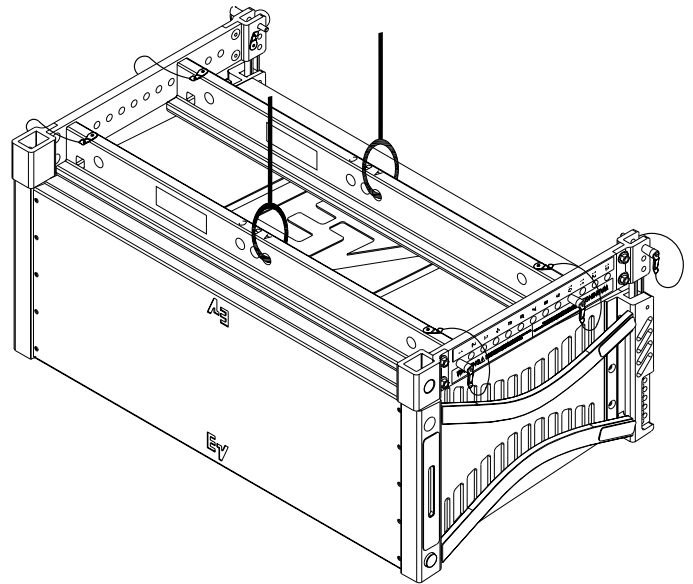

Dual Bar/Single Pull = Use Hole "A"
(Note that the bar is reversed)



12000 Portland Avenue South, Burnsville, MN 55337
Phone: 952/884-4051, Fax: 952/884-0043

www.electrovoice.com

© Telex Communications, Inc. 6/2006
Part Number LIT000056 Rev A

U.S.A. and Canada only. For customer orders, contact Customer Service at:
800/392-3497 Fax: 800/955-6831

Europe, Africa, and Middle East only. For customer orders, contact Customer Service at:
+ 49 9421-706 0 Fax: + 49 9421-706 265

Other International locations. For customer orders, contact Customer Service at:
+ 1 952 884-4051 Fax: + 1 952 736-4212

For warranty repair or service information, contact the Service Repair department at:
800/685-2606

For technical assistance, contact Technical Support at: 866/78AUDIO

Specifications subject to change without notice.