



Electro-Voice®

Operating Instructions



UHF WIRELESS MICROPHONE SYSTEM

User Guide

CE0891Ⓢ

CE1588Ⓢ

TELEX®

Table of Contents

Section 1 - Quick Set-Up 1

Section 2 - System Description 2

Section 3 - Detailed Component Description 3

 Receiver Setup and Operation4

 Headphone Operation6

 Antenna Connections6

 Handheld Transmitter, REV-H8

 Handheld Transmitter Setup and Operation9

 Handheld Transmitter, REV-PH10

 Handheld Transmitter Setup and Operation11

 Bodypack Transmitter, REV-BP12

 Bodypack Transmitter Setup and Operation13

 Bodypack Transmitter, REV-WT14

 Bodypack Transmitter Setup and Operation15

Section 4 - Receiver Display Screens and Functions 17

 Main Operating Screen17

 Group/Channel Edit Screen18

 Functions Screen19

 ClearScan All groups19

 ClearScan Group20

 ClearScan Band20

 Audio Edit21

 Guitar Mode21

 Set Squelch Threshold21

 Sound Check Screen22

 Copy Group22

 Clear Group23

 Name Edit Screen23

 CAN Bus Address24

Section 5 - Transmitter Screens and Detail Functions 25

 Transmitter Display and Controls25

 Lockout25

 Transmitter On/Off Lockout25

Section 6 - Guidelines for Best Performance 26

Section 7 - Trouble Shooting Guide 27

Section 8 - Technical Specifications 29

Section 9 - Approval Information 30

Section 10 - Factory Service 31

Section 11 - Accessories and Parts 32

Section 1 - Quick Set-Up

Quick Set-up: Receiver

1. Do not connect the receiver to any other equipment yet!
2. Connect the two Antennas to the receiver.
3. Plug the power cord into the back of the receiver and into an outlet.
4. Press the Power switch. Display will light up, show EV name and software revision numbers for about 3 seconds and then display the main operating screen.
5. Press the MENU button twice to display the MENU option screen and then press set.
6. With the CLEARSCAN ALL line highlighted, press SET.
7. ClearScan™ returns the clearest group. Press SET again.
8. ClearScan returns the clearest channel in that group. Press SET again.
9. The display will return to the main operating screen with the clearest channel in the clearest group assigned.
10. Turn the receiver off and connect the mixer or other audio system to the receiver XLR Mic/Line Level Connector or the 1/4 inch Line Level Jack.
11. Set the audio mixer or other system input level to minimum.
12. Turn receiver back on.

Receiver “Quick Set-up” is complete.

Quick set-up: Transmitter

1. With the Power switch on the transmitter OFF, install a fresh Battery (9V or two AA) into the transmitter.
2. Place the transmitter Power Switch to the ON position.
3. The LCD display backlight will come on and display Group and Channel and battery level.
4. Press the SET button once and the Group number will flash.
5. Use the up and down arrows to change the Group number to match the channel number displayed on the receiver. Press SET and the Channel Number will flash.
6. Use the up and down arrow buttons to change the Channel to match the receiver. Press Set and nothing will be flashing, the channel is now set.
7. If you are using a bodypack transmitter, plug the microphone into the transmitter connector. If using a guitar, put the bodypack and receiver into instrument mode (see page 5, Part K and page 13, Part G).

Transmitter “Quick Set-up” is complete.

Quick set-up: System Operation

1. With the transmitter and receiver on, monitor the REV Receiver main display screen. Note that the RF (1-100) Bar graph should indicate near the 100 mark. The AF Bar should show very little if any, indication until you talk or sing into the microphone.
2. On the transmitter, press Set and Down buttons at the same time twice to access the gain adjustment mode.
3. Press set and use the Up and Down buttons to adjust the transmitter gain to cause the AF Bar Graph to peak between 50 and 100 for best performance.
4. Set the mixer/amp gain.
5. Talk or sing into the microphone or play the guitar at a normal volume. You should hear audio coming out of the system.
6. If you are not getting enough level at the input of the mixer, see the audio output gain adjustment section on page 5.

“Quick Set-up” is now complete. Please enjoy your REV system.

Section 2 - System Description

System Description

The REV Wireless Microphone system combines frequency agility and ease of use like no other. The REV transmitters and receivers operate over a 24 MHz bandwidth in the UHF portion of the spectrum.

The high quality audio circuitry and advanced Radio Frequency (RF) signal processing offer broadcast quality signal-to-noise and audio clarity.

System Features Include:

- Advanced ClearScan technology for selecting clear channels and inter-modulation free groups
- 960 Radio Channels, user programmable or factory installed
- LCD Displays for ease of viewing
- Patented DSP Phase Diversity System
- CAN Bus Port for computer monitor, control, and updating
- Adjustable Unbalanced Line Level 1/4 inch output jack
- Adjustable Balanced Microphone Line Level XLR output jack
- Front Panel Power ON/OFF Switch
- Permanent Flash Memory for frequency/system storage
- Front Panel Software Control of Squelch and Audio Output settings
- Combination Squelch (Amplitude and Tone) system prevents false squelch
- Lockout feature to prevent accidental channel changes
- Sound Check mode to speed walk testing and provide tangible results
- Backlit LCD displays on transmitters for easy adjustment on dark stages
- “Smart” battery feature in the 9V transmitters means there is no wrong orientation
- Interchangeable heads on the handheld transmitters
- Cast magnesium case on the bodypack transmitter
- Optimized Guitar settings on transmitter and receiver

Section 3 - Detailed Component Descriptions

REV-S or REV-D Receiver

REV Receiver Controls, Connectors, and Indicators

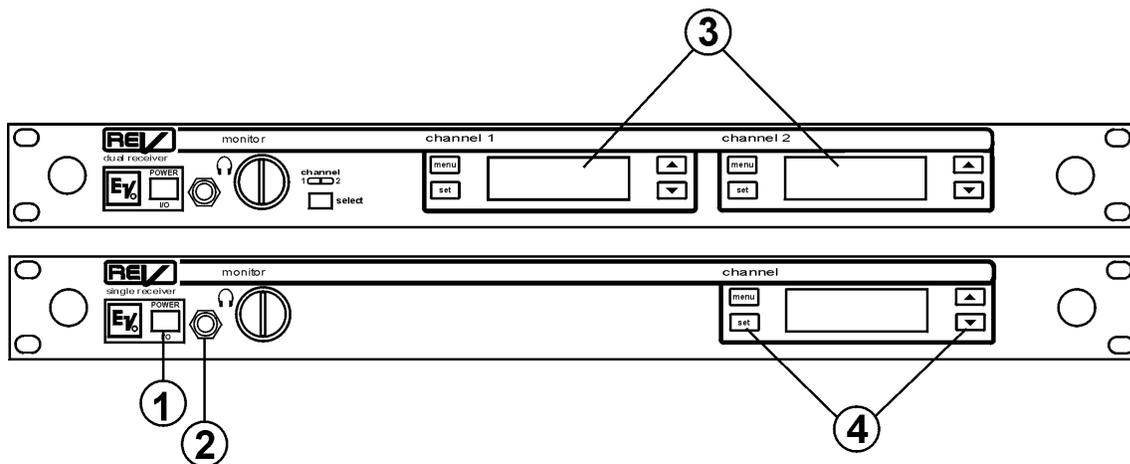


Figure 1
Front Panel

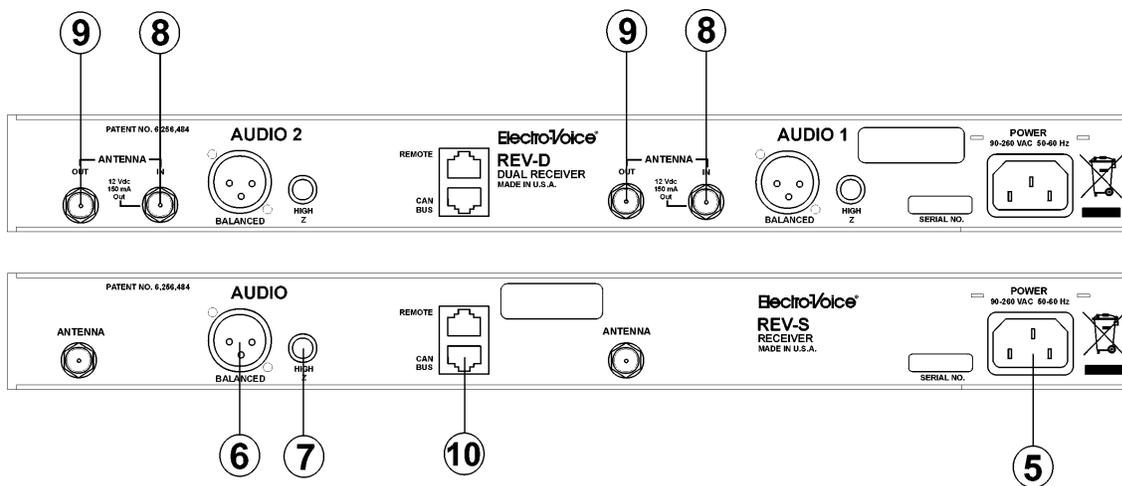


Figure 2
Back Panel

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Power ON/OFF 2. 1/4" headphone jack with adjustable volume (channel selection on REV-D) 3. Graphical Display <ol style="list-style-type: none"> a. Channel Display b. Battery Strength Indicator c. Diversity Indicator d. RF Strength of Signal Indicator e. Audio Level Indicator 4. Display Control Buttons (Menu/Set/Up/Down) | <ol style="list-style-type: none"> 5. IEC Power Cord Connector 6. XLR Balanced Audio Output Connector (two on REV-D) 7. Unbalanced 1/4" Line Level Audio Output Connector (two on REV-D) 8. TNC Antenna Input Connectors 9. REV-D TNC Antenna Output connectors 10. CAN Bus RJ45 connectors (two in parallel) |
|---|---|

3.1 Receiver Setup and Operation

A. Receiver Setup

1. Place the receiver and antennas where there is a clear line of sight to the area where the transmitter will be used. Rotate the antennas to separate them by 90 degrees. See Part 15 for more information.
2. Connect the power cord to the receiver. Turn the receiver on and confirm that it is ON by checking the main display screen. The display will show the company logo, software revision level and then display the main screen with the last channel set.

B. Manual Channel Change

1. From the main display screen press the MENU button once to display the edit screen.
2. Press SET and the group number will flash. The UP and DOWN buttons allow you to scroll through the 18 factory groups and 2 user definable groups.
3. When the group you desire is displayed, press SET to select that group and the Channel Number will start flashing.
4. Scroll to the desired channel, press SET to select.
5. Pressing MENU anytime before pressing SET negates any changes made since the last SET.
6. Once the desired group and channel are displayed (but not flashing) press MENU twice to return to the main display screen.

C. Frequency Assignment (User Defined Groups Only)

1. With a User Group (19u or 20u) and channel selected in step three, press SET until the Frequency Number flashes.
2. Use UP/DOWN to scroll in 25 kHz steps to the desired frequency. With the desired frequency displayed press SET. Hint: holding in the arrow key will increase the speed of the scroll. Just release and press again for fine control.
3. Repeat until all desired Channels in the user group are assigned a frequency.
4. Press MENU twice to return to the main display screen.

D. Advanced ClearScan: This feature automates the process of finding a clear group of inter-modulation free channels and the clearest channels within those groups. From the main display screen push Menu twice to go to the MENU Screen and press SET to select ClearScan.

E. ClearScan All: This function scans all of the groups (factory and user) and returns a list of groups ranked by the number of free channels.

1. Once ClearScan All has run, the screen will display the clearest group with the open channels in that group. You can scroll through the other ranked groups using UP/DOWN.
2. When you have the group you want, press SET to run ClearScan on that group. The display will now show the group with the Channels ranked by clearness and the clearest channel will be flashing.
3. Press SET to select and the clearest channel will be installed, display will return to the main display.

NOTE: Groups 17 and 18 have 16 channels and are marked with an N (17n). These groups require the transmitters to be in the LOW transmit power setting to work together. After ClearScan All runs, the N groups will always be displayed after groups 1-18 and any user defined groups no matter how many channels are free. If you need to use more than 12 systems at one time, scroll down to the N groups and use the clearest group with Normal transmit power.

F. ClearScan Group: this function will scan the group currently selected, which is useful for multi-system setup.

1. Use ClearScan All on the first unit of a multi-system installation to select the clearest group.
2. For each system added, leave all previously selected channel transmitters on, using Step 3 select the current group, select ClearScan Group and press SET.
3. The display will show the remaining clear channels in the group with the clearest flashing.
4. Select the desired channel with UP/DOWN or simply press SET for the clearest channel.
5. The channel will be selected and return to the main display.
6. Repeat until all systems are set up.

G. ClearScan Band: selects and ranks the clearest 16 frequencies in the 24 MHz bandwidth regardless of groups, channels or previous coordination. This feature is useful for selecting one clear channel in a very busy RF environment.

1. From the Options screen, select ClearScan Band and press SET.
2. This scan will run until SET is pressed again so it can be used to evaluate a site over an hour, day or even a week.
3. To end scan, press SET, the program displays Group 21S with the clearest open frequencies in the band assigned channels (up to 16).
4. These frequencies will remain assigned to this group until ClearScan Band is run again.

Caution: Unlike the factory assigned groups, the channels in 21S are not coordinated. If more than two channels from group 21S are used, the combination must be walk tested with all transmitters on before use.

H. Change Lock-Out: Protects settings by disabling the SET button.

1. To engage lock-out press and hold the UP and DOWN arrow keys together for 5 seconds, until the padlock symbol appears.
2. The MENU button still allows different screens to be displayed but no settings can be changed and ClearScan will not run.
3. To reactivate the SET key, press and hold the UP and DOWN keys again for 5 seconds until the padlock symbol disappears.

I. Continue Set Up: make certain the mixer or amplifier input used for the REV is muted or turned down to a minimum level.

J. Plug an audio cable (not supplied) into the 3 pin XLR or 1/4 inch output of the receiver.

NOTE: The XLR connector is the preferred connection since the output is balanced and will be more immune to noise for longer runs of cable, although either can be used with good results.

K. Voice or Guitar: The REV system guitar optimization mode requires both the transmitter and receiver be placed into guitar mode.

1. Press Menu twice to display the options screen, scroll down to Audio Edit and press SET.
2. With the Audio Edit Screen displayed press SET until Audio setting flashes.
3. Use UP/DOWN to select Voice or Guitar mode. The default setting is Voice.
4. Make certain the bodypack transmitter is in the same mode.
5. Now refer ahead to transmitter setup and return to step 10 when that is completed.
6. With the transmitter on, speak into the microphone or play the guitar. Turn up the level on the mixer or amplifier until you are able to hear the desired signal. If no audio is present, repeat setup and refer to the troubleshooting section.

L. Audio Output Level Adjustment: It may be necessary to adjust the receiver output until the volume level from the wireless system approximates the level of an equivalent wired mic/instrument.

1. From the main display screen, press MENU twice to display the menu screen, scroll down to Audio Edit and press SET.
2. Press SET to step through Mic/Line, Balanced (XLR Lvl) and Unbalanced Audio (HiZ Lvl).
3. Use the UP and DOWN to adjust output levels when flashing. The default settings are Mic and -18dB on the outputs.
4. Press SET a final time so nothing is flashing to save the setting.
5. Press MENU to return to main screen.

M. Sound Check Screen: can be used to walk test the performance area.

1. From the main display screen, press MENU twice to display the options screen, scroll down to Sound Check and press set. The sound check screen will be displayed and it includes the following elements.
2. **Peak Hold Audio Meter** - allows you to set the transmitter gain as high as possible for the application which maximizes the signal to noise ratio. Sing, yell or play the guitar at the loudest desired volume and adjust the gain so the meter peaks between 50 and 100.
3. **Low Hold RF Meter** will tell you if you have adequate coverage in the performance area. If the RF level drops below 10 on the meter during a walk of the desired area, reposition the antennas, or change the channel and retest.
4. **Drop Counter** - will tell you if you are exceeding the range or may have some interference problems to contend with. Ideally this count would be zero for the desired performance area. If there are several squelch breaks while walking the area, adjust and check the antennas and re-walk.
5. **Dropout Tone** - Press the UP button and the speaker symbol will change. Now when the receiver increments the dropout counter, it will also send a 1 kHz audio tone out the output so you can hear where on the stage the drop occurs. Press DOWN to turn off the tone. The tone will also deactivate when you return to the main display.
6. **Left and Right Antenna Check** - Press and hold the SET button until the screen changes to two large meters marked L and R. This screen is used to check the continuity of the left and right antennas. If the RF levels are not approximately the same, check connections. Press SET to return to Sound Check Screen.

N. Squelch Adjustment - The squelch setting can be used to maximize range or immunity to noise.

1. Turn the transmitter off and from the receiver Options screen select Squelch and press SET.
2. The current squelch setting will be displayed, the setting will flash and (the tone coded portion of the squelch is turned off in set mode to allow you to notice any changes in the amplitude squelch setting).
3. Adjust the squelch using the UP/DOWN keys and walk test the unit. Maximum squelch (15) maximizes noise immunity but limits the range. Minimum squelch (1) will maximize the range but may allow noise at the end of range.
4. Repeat until desired range coverage is acceptable with the maximum possible squelch.

Headphone Operation

1. With the transmitters and receivers setup and operating, plug stereo headphones into the 1/4 inch jack on the front panel.
2. The Selected Receiver LED will indicate receiver 1 is being monitored. Press the Receiver Select button once to change from Receiver 1 to 2.
3. Press the Receiver Select button once more and both indicator LEDs will light. You can now listen to both receivers. **NOTE:** if both receivers are set to the same channel, the volume will double.
4. Pressing the Select button once more cycles back to Receiver 1.

Antenna Connections

1. Install the two 1/2 wave antennas to the “antenna in” jacks on the rear panel.

NOTE: The two 1/2 wave antennas included with the REV can be remote mounted. For an additional 5dB gain use the LPA500 log periodic directional antenna.

2. The REV-DUAL is equipped with a left and right antenna output jack. These jacks can be used to connect up to 3 REV-DUAL (6 receivers) to two antennas without any additional equipment. **DO NOT** remove “dummy” loads unless connecting to another receiver.
3. Figure 3 shows the connection diagram for 3 REV-DUAL units.
4. UP to 12 REV-DUAL units can be operated with just two antennas with the optional APD4+ antenna distribution unit (see Figure 4).

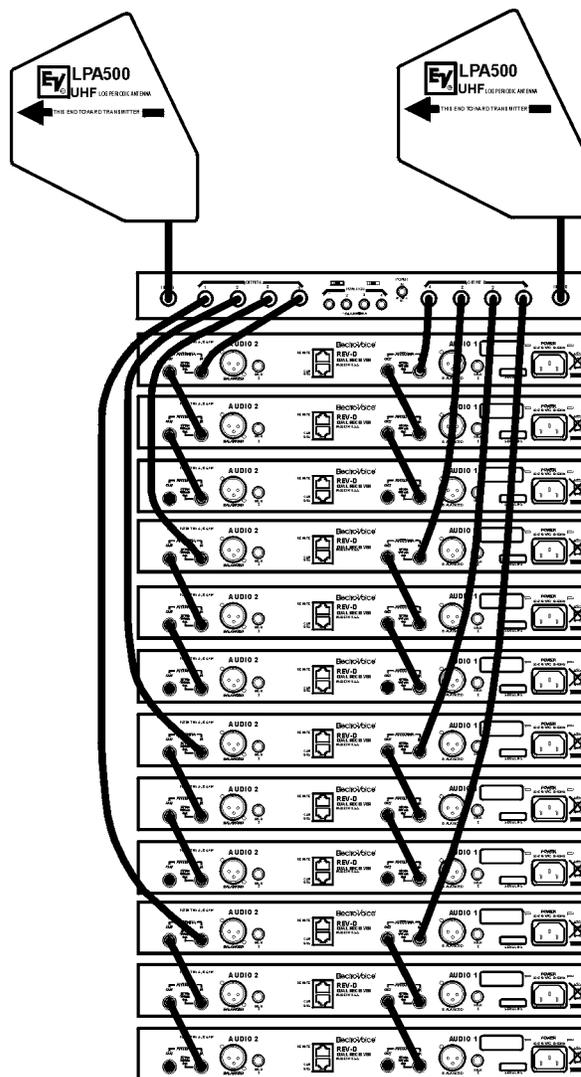


Figure 4
Antenna Chain with APD4-B

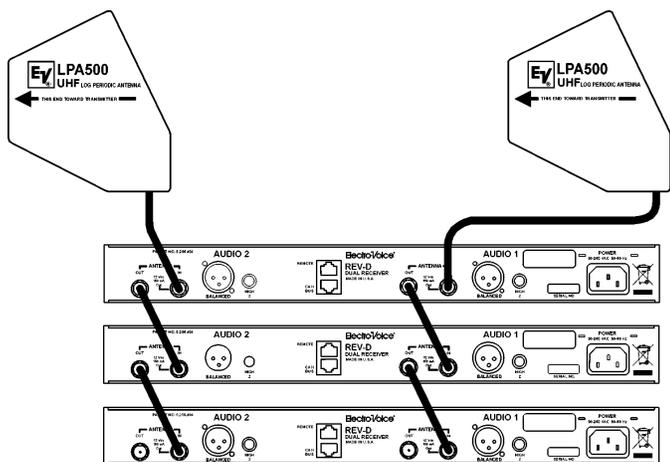


Figure 3
Antenna Chaining

12 Volt Power On “Antenna In” Jacks

To power in line antenna amplifiers, 12 volt power is available on the center pin of the antenna in jacks. This power is disabled when the REV leaves the factory but may be turned on by the installer.

To turn on the 12 volts, first take off the cover of the radio by removing 14 screws. There is a 2 pin “header” and a “jumper” behind the “XLR” audio connector on each of the two large printed circuit boards. See Figure 5. The jumper is installed on one pin of the header at the factory. To turn on power, unplug the jumper and install it on both pins of the header.

CAUTION: Do not attach antennas and splitters with a DC short circuit to the antenna in jacks when the power is turned on. Damage could result to the splitter or receiver.

The following antennas and accessories may be used with power on:

- FA-1, CLA-X, APD4+, APD4-1+, UAA-50**

The following antennas and accessories may be used with the power off:

- FA-1, CLA-X, LPA-500, APD4, APD4-1**

REV-LINK PC Software

1. Software to monitor and control the REV receivers from a PC through the USB port and a UCC-1 is available at www.electrovoice.com. Minimum system requirements are:

- Windows 2000
- 512 Mbytes of RAM
- One USB port
- UCC-1 or N8000
- CD-ROM Drive
- 2 Mbytes of hard drive memory


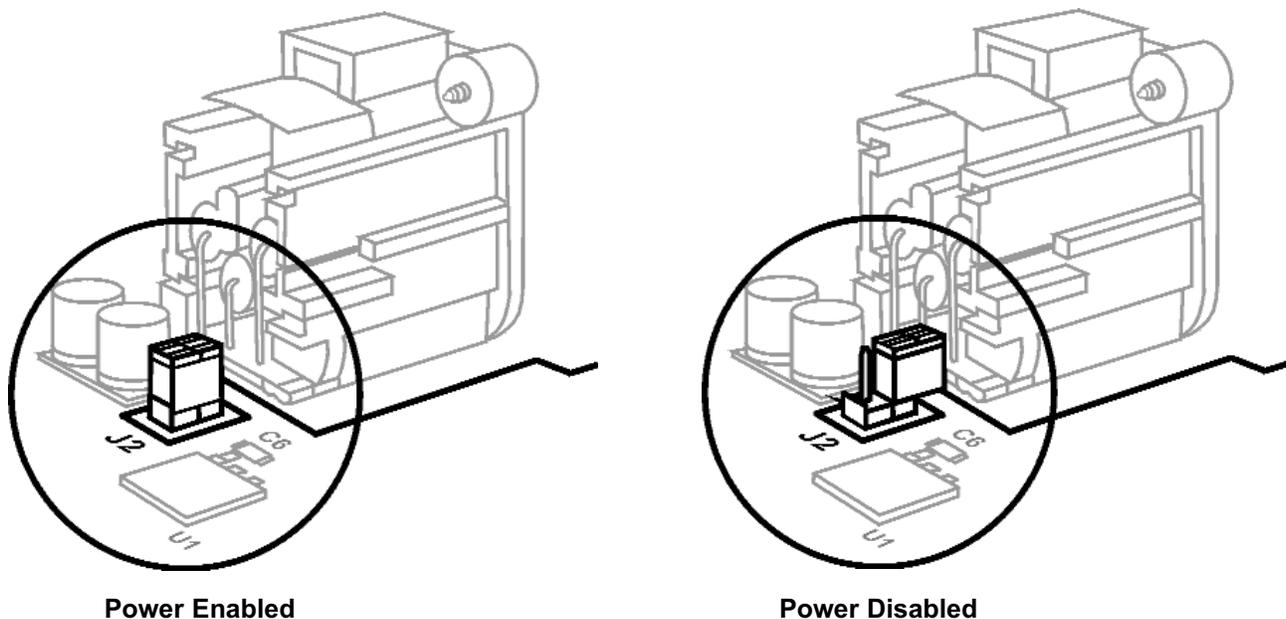



Figure 5
Moving Jumper
 (Be sure to move Jumper on Both Receiver printed circuit boards.)

3.2 Handheld Transmitter REV-HXX

REV-HXX Controls, Connectors, and Indicators

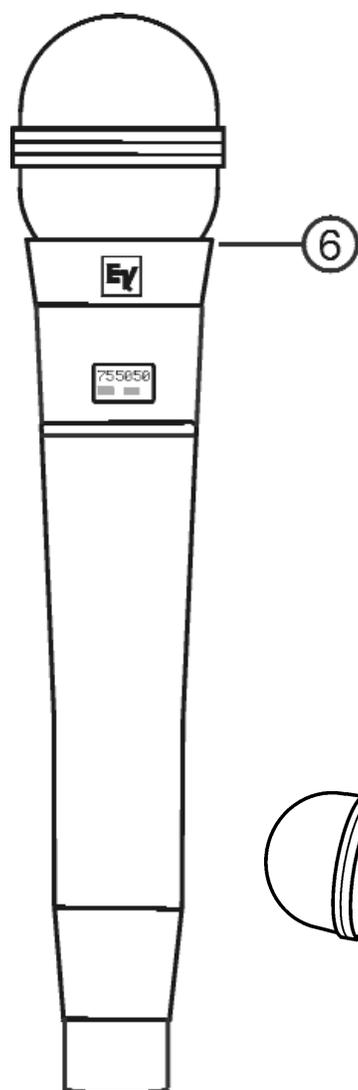

**Figure 6
Handheld Transmitter**

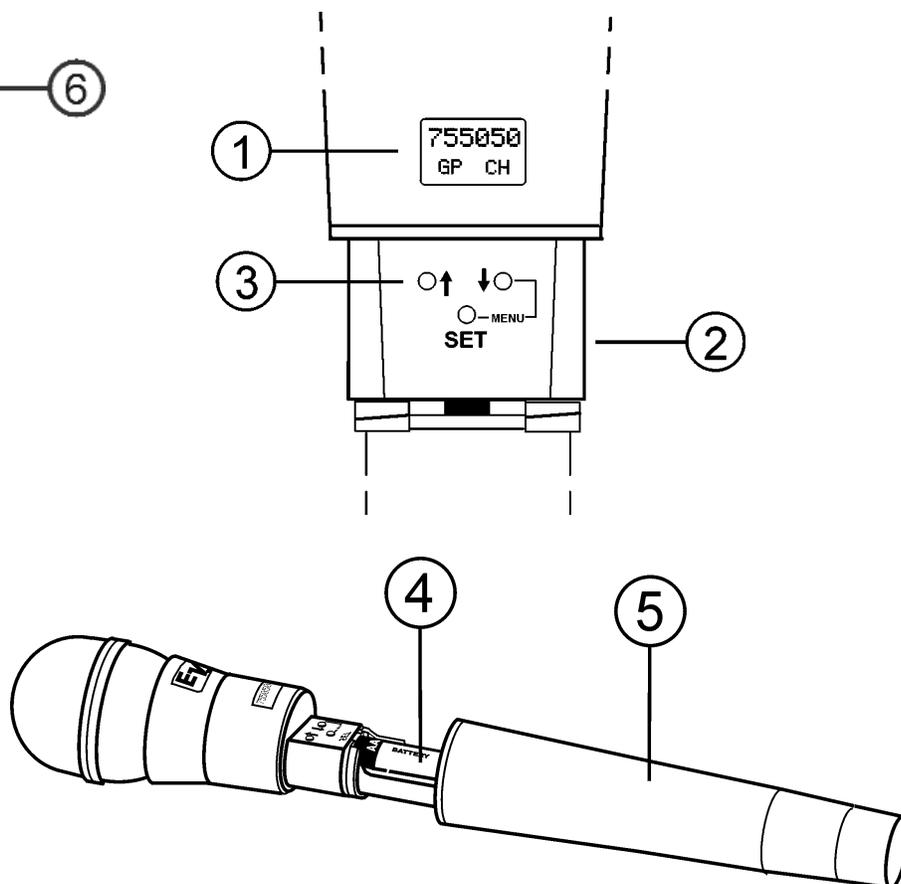

**Figure 7
View of Transmitter Controls**

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Main Display - LCD (Channel, Frequency and Battery Level Gauge) Display backlight - flashes when battery is low 2. Power On/Off Switch 3. Control buttons - SET, UP, and DOWN | <ul style="list-style-type: none"> 4. Two AA Batteries 5. Battery Cover - Screw Type 6. Interchangeable Microphone Element |
|--|---|

Handheld Transmitter REV-HXX

A. Insert Batteries. Lower the battery cover by unscrewing it completely. Slide down the inner cover and insert two AA batteries, positive ends toward the display.

B. Turning the transmitter On - With battery compartment still open, hold the unit so you can see the display and the control panel. Turn the unit on by sliding the power switch forward to the ON position. The display backlight will light for a second and the display will show the battery level, Group and Channel numbers.

C. Change the group and channel numbers

1. Press SET, the Group number will flash and can be changed with the UP/DOWN keys.
2. Once the desired Group number is showing, press SET to select and the Channel number will flash.
3. Select the Channel and press SET again, the flashing will stop and the channel is now set.

D. To See Other Screens

1. Press SET and DOWN at the same time to display the exact transmit frequency.
2. Press SET and DOWN at the same time to display the battery level in percent.
3. Press SET and DOWN again to display the gain setting screen.
4. Press SET and DOWN again to show the RF Transmit Level.
5. SET and DOWN one more time returns you to the Group and Channel screen.

E. Frequency Edit Mode - (User Group Only)

1. With the frequency screen displayed, press SET and use UP and DOWN to adjust frequency.
2. Press SET and DOWN at the same time four times to return to Group and Channel mode.

F. Gain Setting Mode

1. With the Gain Screen displayed, press SET and the level numbers will flash.
2. Use UP and DOWN to adjust the transmitter gain. Watch the Audio meter on the receiver and set the gain to peak between 50 and 100 when singing/speaking into the microphone as loud as it will be used during the performance.
3. Press SET and DOWN at the same time two times to return to Group and Channel mode.

NOTE: Operating with the transmitter audio gain set as high as possible (without distortion or peaks all the way to the right end of the meter) will result in the best performance and highest signal to noise ratio.

G. RF Transmit Level

1. With the RF Transmit Level displayed, press SET and the Level (on the right) will flash.
2. Use UP and DOWN to set it at Hi (50mW) or Lo (5mW).
3. Press SET and DOWN at the same time once to return to the Group and Channel mode.

H. Power Lock Out - Disables the power switch

1. To engage power lock press and hold SET, UP and DOWN at the same time until ON-LOCK appears in the display.
2. To turn the unit off while in ON-LOCK, place the power switch in the OFF position and push any one of the SET, UP or DOWN buttons.
3. To remove the lock, press and hold SET, UP and DOWN again at the same time until ON-OFF appears in the display.
4. The ON-LOCK mode can also be entered by quickly cycling the power switch three times. But using this method the unit will not be in ON-LOCK the next time it is powered up.

I. Change Lock-Out - Disables the SET button to protect settings.


1. To engage Change Lock press and hold the UP and DOWN arrow keys together until SECURE appears in the display.
2. To remove the Change Lock, press and hold the UP and DOWN keys until ACCESS appears in the display.

J. Verify reception.


1. With the transmitter and receiver on and matching Group and Channel, the main receiver display should be indicating an RF signal on the bar graph.
2. Speak into the microphone and the Audio Meter bar graph should indicate audio signal presence.
3. If the level meters do not show reception, make certain the group and channel are matching and refer to the trouble shooting section.
4. Go back to Section 3.1 - Receiver Setup and Operation, Step 1, to complete system set up and test.

3.3 Handheld Transmitter REV-PHXX

REV-PHXX Controls, Connectors, and Indicators

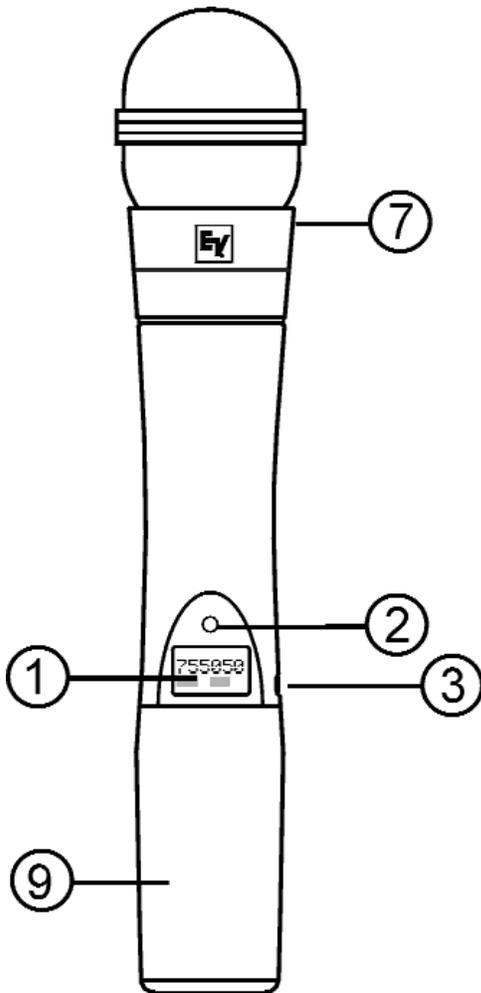

**Figure 8
Handheld Transmitter**

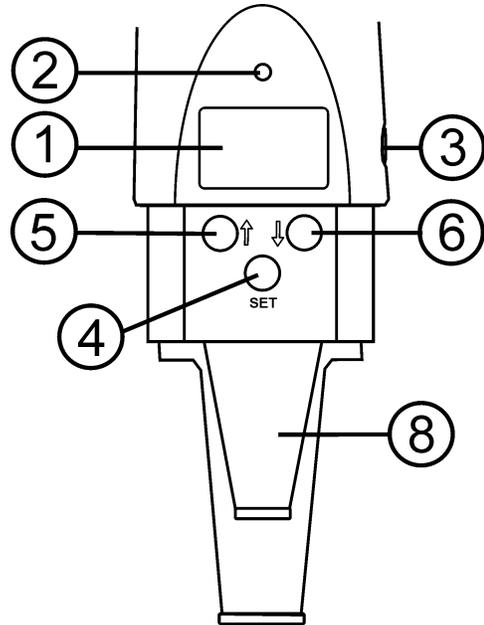

**Figure 9
View of Transmitter Controls**

- 1. Main Display - LCD (Channel, Frequency and Battery Level Gauge)
- 2. Red Low battery LED indicator
- 3. Power On/Off Switch
- 4. SET control button
- 5. Channel/Frequency Up Switch

- 6. Channel/Frequency Down Switch
- 7. Interchangeable Microphone Element
- 8. 9V Battery Compartment
- 9. Battery Cover - Screw type

Handheld Transmitter REV-PHXX

A. Insert Batteries. Remove the battery cover by unscrewing it completely. Insert a 9V battery terminal end first into the battery compartment. **NOTE:** The HTU-2 unique design allows the battery to be inserted and used regardless of the positive and negative terminal position.

B. Turning the transmitter On - With battery compartment still open, hold the unit so you can see the display and the control panel. Turn the unit on by sliding the power switch forward to the ON position. The low battery LED will light for a second and the display will show the Group and Channel numbers.

C. Change the group and channel numbers

1. Press SET, the Group number will flash and can be changed with the UP/DOWN keys.
2. Once the desired Group number is showing, press SET to select and the Channel number will flash.
3. Select the Channel and press SET again, the flashing will stop and the channel is now set.

D. To see Other Screens

1. Press SET and DOWN at the same time to display the exact transmit frequency.
2. Press SET and DOWN at the same time to display the battery level in percent.
3. Press SET and DOWN again to display the gain setting screen.
4. Press SET and DOWN again to show the RF Transmit Level.
5. SET and DOWN one more time returns you to the Group and Channel screen.

E. Frequency Edit Mode - (User Group Only)

1. With the frequency screen displayed, press SET and use UP and DOWN to adjust frequency.
2. Press SET and DOWN at the same time four times to return to Group and Channel mode.

F. Gain Setting Mode

1. With the Gain Screen displayed, press SET and the level numbers will flash.
2. Use UP and DOWN to adjust the transmitter gain. Watch the Audio meter on the receiver and set the gain to peak between 50 and 100 when singing/speaking into the microphone as loud as it will be used during the performance.
3. Press SET and DOWN at the same time two times to return to Group and Channel mode.

NOTE: Operating with the transmitter audio gain set as high as possible (without distortion or peaks all the way to the right end of the meter) will result in the best performance and highest signal to noise ratio.

G. RF Transmit Level

1. With the RF Transmit Level displayed, press SET and the level (on the right) will flash.
2. Use UP and DOWN to set it at Hi (50mW) or Lo (5mW).
3. Press SET and DOWN at the same time once to return to the Group and Channel mode.

H. Power Lock Out - Disables the power switch

1. To engage power lock press and hold SET, UP and DOWN at the same time until ON-LOCK appears in the display.
2. To turn the unit off while in ON-LOCK, place the power switch in the OFF position and push any one of the SET, UP or DOWN buttons.
3. To remove the lock, press and hold SET, UP and DOWN again at the same time until ON-OFF appears in the display.
4. The ON-LOCK mode can also be entered by quickly cycling the power switch three times. But using this method the unit will not be in ON-LOCK the next time it is powered up.

I. Change Lock-Out- Disables the SET button to protect settings.

1. To engage Change Lock press and hold the UP and DOWN arrow keys together until SECURE appears in the display.
2. To remove the Change Lock, press and hold the UP and DOWN keys until ACCESS appears in the display.

J. Verify reception

1. With the transmitter and receiver on and matching Group and Channel, the main receiver display should be indicating an RF signal on the bar graph.
2. Speak into the microphone and the Audio Meter bar graph should indicate audio signal presence.
3. If the level meters do not show reception, make certain the group and channel are matching and refer to the trouble shooting section.
4. Go back to Section 3.1 - Receiver Setup & Operation Step 10 to complete system set up and test.

3.4 Bodypack Transmitter
REV-BP

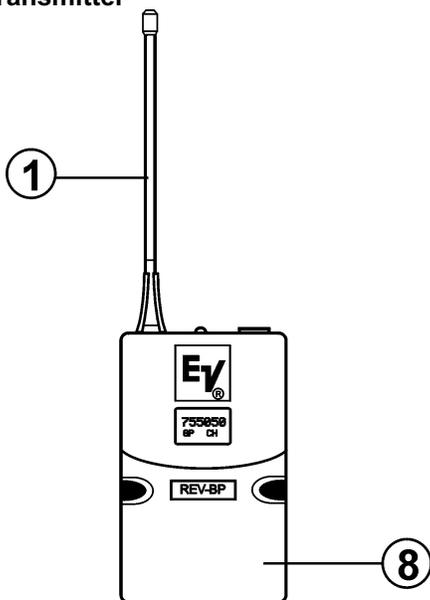


Figure 10
Bodypack Transmitter

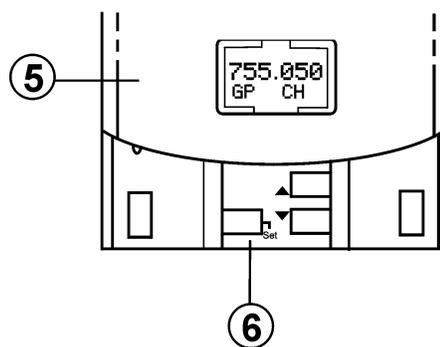


Figure 11
Control View

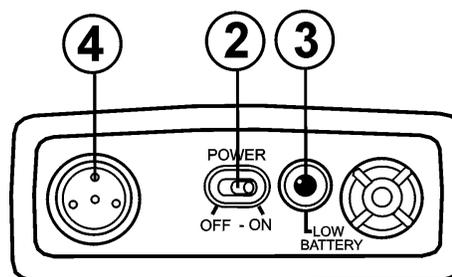


Figure 12
Top View

WARNING:
Do not install screw without button!
The transmitter will be damaged.
Do not over tighten screw.
Damage to case will result.

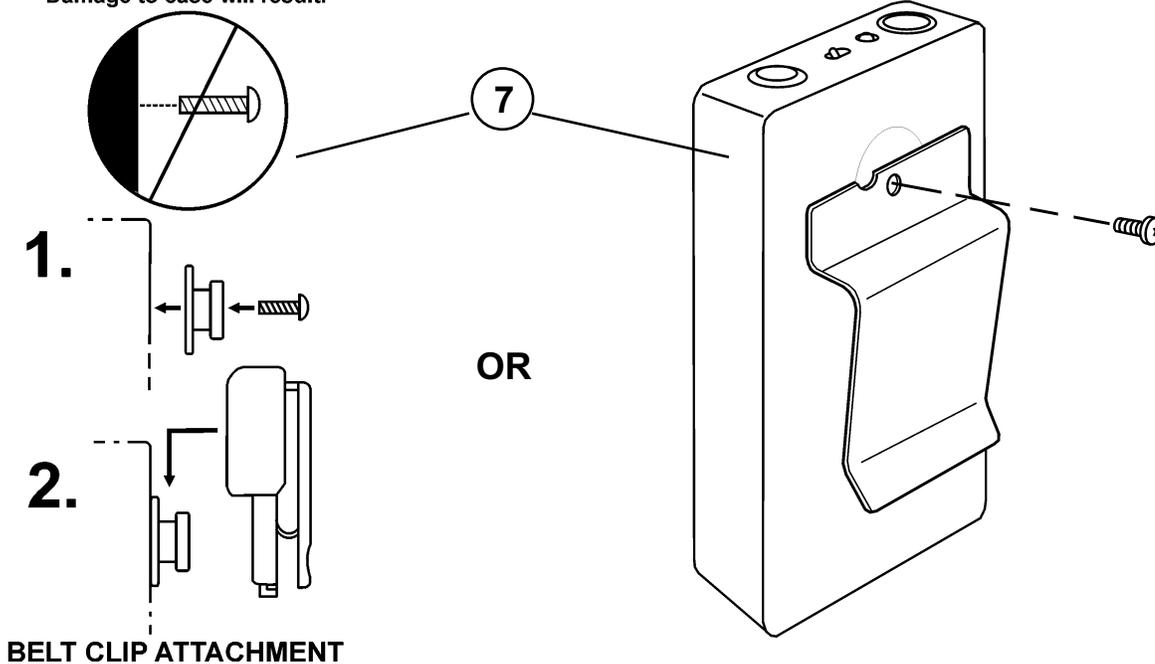


Figure 13
Belt Clip Attachment

Rev-BP Controls, Connectors, and Indicators

- | | |
|--|--|
| <ul style="list-style-type: none"> 1. Antenna - Flexible 1/4 wave antenna removable (replacement part - see Section 10) 2. Power On/Off Switch 3. Low Battery LED Indicator 4. TA4 Audio Connector | <ul style="list-style-type: none"> 5. LCD Display (Channel or Frequency, Battery Level Indication) 6. Display Control Buttons (SET/Up/Down) 7. Belt Clip (Removable and Detachable, Flat or Cell Phone Style Clip) 8. 9V Battery Compartment |
|--|--|

Bodypack Transmitter REV-BP

A. Install Antenna. The REV-BP is equipped with a detachable antenna. Screw in the antenna included with the system. See the accessories section at the end of this manual for optional antennas.

B. Insert Batteries. Pinch the battery door tabs inward and pull the door open. Insert a 9V battery as indicated by +/- in the holder. (Note: the REV-BP unique design allows the battery to be inserted and used regardless of the positive and negative terminal position, the indicators are there for reference only).

C. Turning the transmitter On - With battery compartment still open, turn the unit on with Power switch on the top panel. The battery low LED and display back light will light for a second and the display will show the battery level, the Group and Channel numbers.

D. Change the group and channel numbers

1. Press SET, the Group number will flash and can be changed with the UP/DOWN keys.
2. Once the desired Group number is showing, press SET to select and the Channel number will flash.
3. Select the Channel and press SET again, the flashing will stop and the channel is now set.

E. To See Other Screens

1. Press SET and DOWN at the same time to display the exact transmit frequency.
2. Press SET and DOWN at the same time to display the battery level in percent.
3. Press SET and DOWN again to display the gain setting screen.
4. Press SET and DOWN again to show the RF Transmit Level.
5. Press SET and DOWN again for Voice/Guitar.
6. Set and Down one more time returns you to the Group and Channel screen.

F. Frequency Edit Mode - (User Group Only)

1. With the frequency screen displayed, press SET and use UP and DOWN to adjust frequency.
2. Press SET and DOWN at the same time four times to return to Group and Channel mode.

G. Attach Microphone or Guitar/Instrument

Microphone - plug the TA4 end of the microphone cable into the top panel of the REV-BP. Speak into the microphone and the Audio Meter bar graph should indicate audio signal presence.

Guitar - Press SET-DOWN until voice is displayed. Press SET, display will flash, press UP and display will change to Guitar, press set and return to main display. NOTE: The REV receiver must also be put into Instrument mode to optimize the system for guitar. Plug in the guitar TA4 cable. Strum the guitar and the Audio Meter bar graph on the receiver should indicate audio signal presence.

H. Gain Setting Mode

1. With the Gain Setting displayed, press SET and the level numbers will flash.
2. Use UP and DOWN to adjust the transmitter gain. Watch the Audio meter on the receiver and set the gain to peak between 50 and 100 when singing/speaking into the microphone as loud as it will be used during the performance.
3. Press SET and DOWN at the same time two times to return to Group and Channel mode.

NOTE: Operating with the transmitter audio gain set as high as possible (without distortion or peaks all the way to the right end of the meter) will result in the best performance and highest signal to noise ratio.

I. RF Transmit Level

1. With the RF Transmit Level displayed, press SET and the Level (on the right) will flash.
2. Use UP and DOWN to set it at Hi (50mW) or Lo (5mW).
3. Press SET and DOWN at the same time once to return to the Group and Channel mode.

J. Power Lock Out - Disables the power switch

1. To engage power lock press and hold SET, UP and DOWN at the same time until ON-LOCK appears in the display.
2. To turn the unit off while in ON-LOCK, place the power switch in the OFF position and push any one of the SET, UP or DOWN buttons.
3. To remove the lock, press and hold SET, UP and DOWN again at the same time until ON-OFF appears in the display.
4. The ON-LOCK mode can also be entered by quickly cycling the power switch three times. But using this method the unit will not be in ON-LOCK the next time it is powered up.


K. Change Lock-Out - Disables the SET button to protect settings.

1. To engage Change Lock press and hold the UP and DOWN arrow keys together until SECURE appears in the display.
2. To remove the Change Lock, press and hold the UP and DOWN keys until ACCESS appears in the display.


L. Verify reception

1. With the transmitter and receiver on and matching Group and Channel, the main receiver display should be indicating an RF signal on the bar graph.
2. Speak into the microphone and the Audio Meter bar graph should indicate audio signal presence.
3. If the level meters do not show reception, make certain the group and channel are matching and refer to the trouble shooting section.
4. Go back to Section 3.1 - Receiver Setup & Operation Step 1) to complete system set up and test.


3.5 Bodypack Transmitter
REV-WT

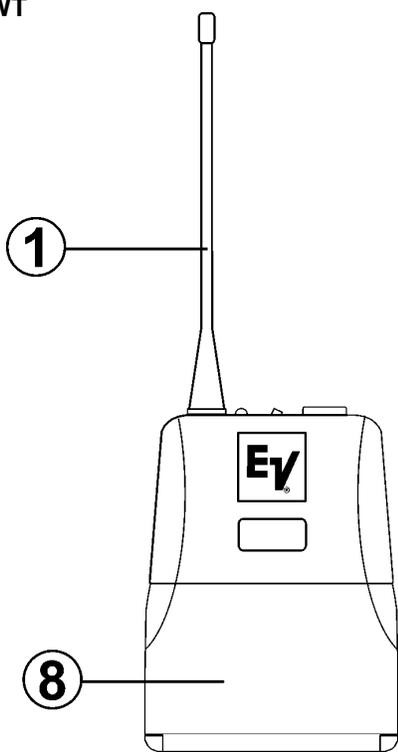


Bodypack Transmitter

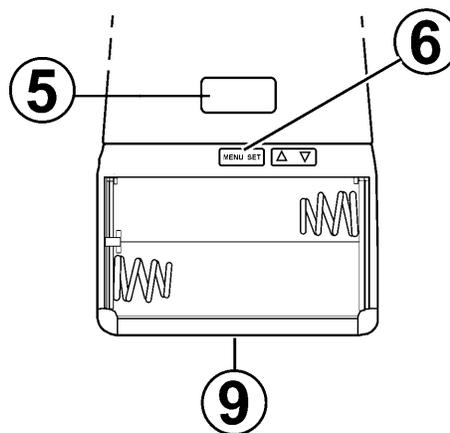

Control View

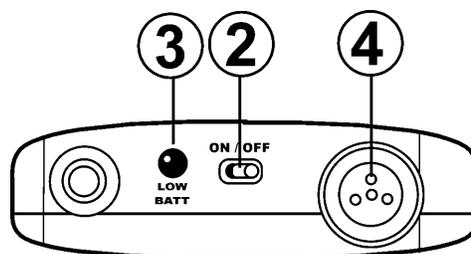

Top View

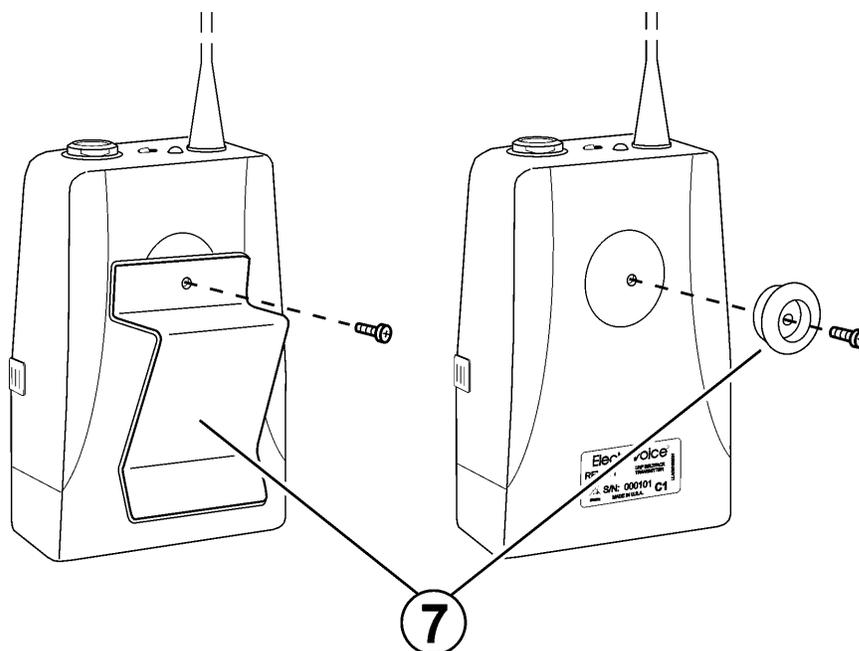

Belt Clip Attachment

REV-WT Controls, Connectors, and Indicators

- | | |
|---|---|
| <ul style="list-style-type: none"> 1. Antenna - Flexible 1/4 wave antenna removable (replacement part see Section 10) 2. Power On/Off Switch 3. Low Battery LED Indicator 4. TA4 Audio Connector 5. LCD Display (Channel or Frequency, Battery Level Indication) | <ul style="list-style-type: none"> 6. Display Control Buttons (Menu/Set/Up/Down) 7. Belt Clip (Removable and Detachable, Flat or Cell Phone Style Clip) 8. Battery Compartment - Two AA 9. Battery Recharge contacts (for use optional BH-200 charging Station) |
|---|---|

Bodypack Transmitter REV-WT

A. Install antenna. The REV-WT is equipped with a detachable antenna. Screw in the antenna included with the system. See the accessories section at the end of this manual for optional antennas.

B. Insert Batteries. Pinch the battery door tabs inward and pull the door open. Insert two AA batteries as indicated by +/- in the holder.

C. Turning the transmitter On - With battery compartment still open, turn the unit on with Power switch on the top panel. The battery low LED and display back light will light for a second and the display will show the battery level, the Group and Channel numbers.

D. Change the group and channel numbers

1. Press SET, the Group number will flash and can be changed with the UP/DOWN keys.
2. Once the desired Group number is showing, press SET to select and the Channel number will flash.
3. Select the Channel and press SET again, the flashing will stop and the channel is now set.

E. To See Other Screens

1. Press MENU to display the exact transmit frequency.
2. Press MENU again to display the gain setting screen.
3. Press MENU again to show the RF Transmit Level.
4. Press MENU again for Voice/Guitar.
5. Press MENU again for Power Switch Setting
6. MENU one more time returns you to the Group and Channel screen.

F. Frequency Edit Mode - (User Group Only)

1. With the frequency screen displayed, press SET and use UP and DOWN to adjust frequency.
2. Press MENU five times to return to Group and Channel mode.

G. Attach Microphone or Guitar/Instrument Microphone-

plug the TA4 end of the microphone cable into the top panel of the REV-WT. Speak into the microphone and the Audio Meter bar graph on the receiver should indicate audio signal presence.

Guitar - Press MENU until voice is displayed. Press SET, display will flash, press UP and display will change to Guitar, press SET and return to main display. **NOTE:** The REV receiver must also be put into Guitar mode to optimize the system for guitar. Plug in the guitar TA4 cable. Strum the guitar and the Audio Meter bar graph on the receiver should indicate audio signal presence.

H. Gain Setting Mode

1. With the Gain Screen displayed, press SET and the level numbers will flash.
2. Use UP and DOWN to adjust the transmitter gain. Watch the Audio meter on the receiver and set the gain to peak between 50 and 100 when singing/speaking into the microphone as loud as it will be used during the performance.
3. Press MENU four times to return to Group and Channel mode.

NOTE: Operating with the transmitter audio gain set as high as possible (without distortion or peaks all the way to the right end of the meter) will result in the best performance and highest signal to noise ratio.

I. RF Transmit Level

1. With the RF Transmit Level displayed, press SET and the Level (on the right) will flash.
2. Use UP and DOWN to set it at Hi (50 MW) or Lo (5mW).
3. Press MENU three times to return to the Group and Channel mode.

J. Power Switch Settings - Power Lock-Out

1. With the Power Switch Settings screen display press Set and use UP and DOWN to select one of the options:
 - On off Mode - Switch turns power on and off normally
 - Mute Mode - Switch turns off audio but leaves RF signal live. To turn the unit off, put switch in off position and press MENU, SET, UP or DOWN.
 - tOnLock(k) Mode - Switch is disabled one time. To turn the unit off, put switch in off position and press MENU, SET, UP or DOWN. The next time the unit is powered on the on/off will work normally
 - On-Loc(k) Mode - Switch is disabled. To turn the unit off, put switch in off position and press MENU, SET, UP or DOWN
2. To change the power switch mode return to this screen and select a different mode.
3. Press Menu once to return to Group and Channel mode.
4. The tON-LOCK mode can also be entered by quickly cycling the power switch three times. By using this method the unit will not be in ON-LOCK the next time it is powered up.

K. Change Lock-Out - Disables the SET button to protect settings

1. To engage change Lock press and hold the UP arrow key about four seconds until SECURE appears in the display.
2. To remove the Change Lock, press and hold the UP key until ACCESS appears in the display.

L. No RF Operation

During a show or setup it is sometimes desired to turn on a transmitter without the RF carrier to check the channel, assign a new channel or check battery levels.

1. Press and hold the DOWN button when you turn the power switch on and **tr OFF** will be displayed.
2. All setup functions will work but there will be no RF carrier or audio

The tr OFF mode is a one time operation, the next time the unit is turned on it will be in normal operation mode.

M. Master Reset

To return the transmitter to factory default settings and erase all user defined frequencies press and hold the MENU and DOWN keys at the same time for 8 seconds.

N. Verify reception

1. With the transmitter and receiver on and matching Group and Channel, the main receiver display should be indicating an RF signal on the bar graph.
2. Speak into the microphone and the Audio Meter bar graph should indicate audio signal presence
3. If the level meters do not show reception, make certain the group and channel are matching and refer to the trouble shooting section.
4. Go back to Section 3.1 - (Receiver Setup & Operation Step 1) to complete system set up and test

Section 4 - Receiver Display Screens and Functions

Main Operating Screen

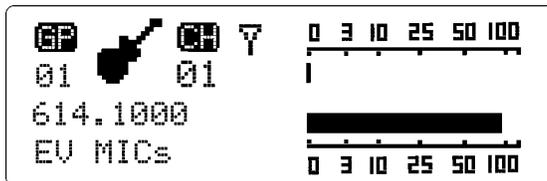



Figure 14
Main Operating Screen

Display:

1. Group Number 18 factory + 2u user defined
2. Channel Number 01 - 16
3. Microphone Label or Name 8 characters
4. Battery Status 100 to 0 Pct in 20 Pct steps / Flash if low
5. Audio Meter 0 to 100% Deviation
6. RF Signal Strength 1 to 100
7. Antenna Diversity Status left or right antenna
8. Edit Lockout Status Padlock next to GP indicates Locked

Controls:

1. [MENU] goes to next screen
2. [UP] + [DOWN] for 3 seconds Sets / Resets Edit Lockout
3. [SET] for 3 seconds to change to the alternate operating screen
4. [SET] + [MENU] + [UP] + [DOWN] for 3 seconds for master reset
5. [UP] or [DOWN] adjust LCD display contrast up and down

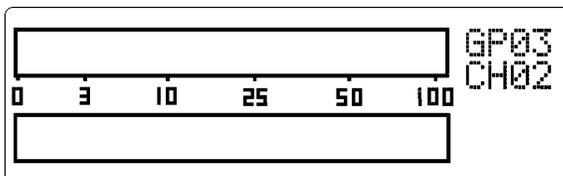

Alternate Main Operating Screen

Group / Channel Edit Screen



Figure 15
Group / Channel Edit Screen

Display:

- | | |
|---------------------------------|---|
| 1. Frequency Band Designation | A or B |
| 2. Group Number | 18 factory + 2u user defined |
| 3. Channel Number | 01 - 16 |
| 4. TV Channel | US TV channel the current frequency is in |
| 5. Transmit / Receive Frequency | 24 MHz operating band in 25 kHz steps |

Controls:

1. [MENU] goes to next screen
2. [UP] + [DOWN] for 3 seconds Sets / Resets Edit Lockout

If Edit Mode is not locked out:

3. [SET]
 - A. Starts Edit mode; Group Number begins flashing
 - B. Steps between Group Number and Channel Number, frequency (in user groups only), label. Selected field flashes to indicate it can be changed.
 - C. Effects change after [UP] or [DOWN] have been pressed, then returns you to Display Mode.
4. [MENU] stops Edit mode without effecting changes since [SET] was last pressed.
5. [UP] or [DOWN] (in Edit Mode)
 - A. Increments or decrements selected field when flashing.
 - B. [UP] and [DOWN] auto-repeat when the button is held. Auto-repeat starts after the button has been held for 1 second. Group and Channel have a slow auto-repeat.

Anytime Group or Channel is changed, the Frequency field is updated to show the correct frequency for that Group and Channel.

Functions Screen

Controls:

Use [UP] [DOWN] to select and view other functions

Use [SET] to start the function

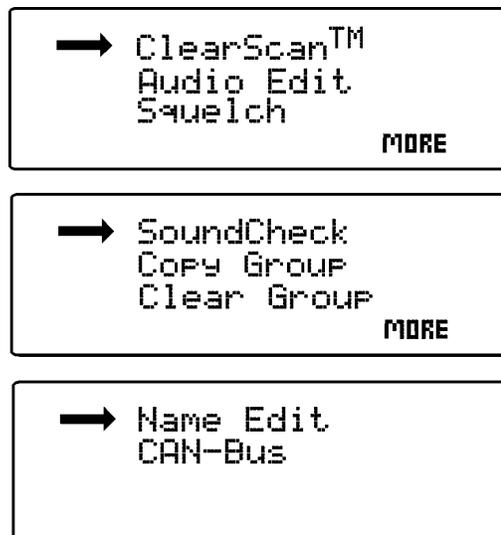


Figure 16
Functions Screen

ClearScan All: searches all defined frequency groups for the ones with the greatest number of receiver channels clear of interference. Once a group is selected an additional scan is made to determine the best frequencies in the group:

After pressing [SET]

Press [MENU] to abort

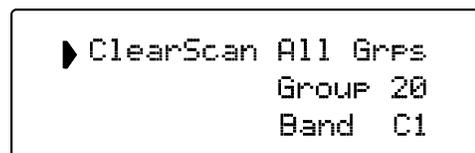


Figure 17
ClearScan All Groups Screen

After scanning, ClearScan will display the group that has the most interference free receive channels. These clear channels are displayed on the right half of the screen. Busy channels are represented by an X. Press [SET] to place the receiver on this group. ClearScan then scans to select the clearest channels within the group (see ClearScan Group). Press [SET] to accept this channel and return to the operating screen.

The [UP] and [DOWN] buttons may be used to select the next best group/channel and so forth.

Press [MENU] to return to the Operating Screen with the receiver set to the Group, Channel and Frequency it was on prior to executing ClearScan.

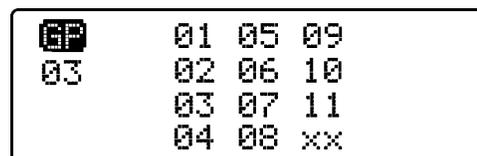


Figure 18
Clear Channel Screen

ClearScan Group: scans channels within the currently selected frequency group and displays the channels that are clear of interference.

After pressing [SET]

Press [MENU] to abort

After scanning the currently selected group, ClearScan will display the channels that are free of interference. These clear channels are displayed on the right half of the screen. The channels are ranked according to noise; the channel with the least amount of interference is presented first.

The [UP] and [DOWN] buttons may be used to select a different clear channel within the currently selected group.

Press [SET] to place the receiver on the currently selected channel and return to the Operating Screen.

Press [MENU] to return to the Operating Screen with the receiver set to the Group, Channel and Frequency it was on prior to executing ClearScan.

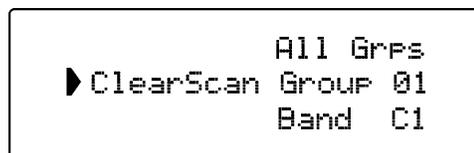


Figure 19
ClearScan Group Screen

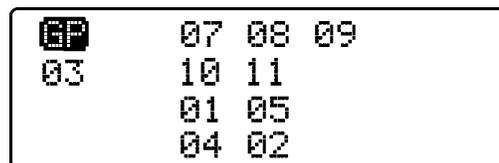


Figure 20
Clear Channel Screen

ClearScan Band: continuously scans all frequencies within the bandwidth of the receiver. The scan is started at the frequency the receiver is on and proceeds in 200 kHz increments on either side until the whole band is scanned. The scan is repeated until ended by the user.

After pressing [SET]

After pressing [SET]

Each frequency is scanned continuously within the band; the highest reading on each frequency is stored to give a worst-case reading as long as the scan is being done.

Pressing [SET] ends the scan. After scanning, ClearScan places the 16 best frequencies in the band into 'scanned' group 21s. This group is stored to prevent accidental erasure. The best frequency is placed at channel one and displayed.

The [UP] and [DOWN] buttons may be used to select the next clear channel.

Press [SET] to accept currently selected frequency and return to the Operating Screen.

Press [MENU] to return to the Operating Screen with the receiver set to the Group, Channel and Frequency it was on prior to executing ClearScan.

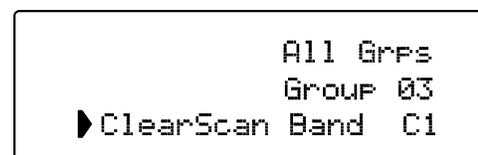


Figure 21
ClearScan Band Screen

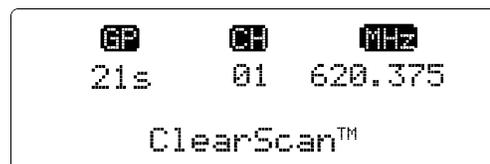


Figure 22
Clear Channel Screen

Audio Edit

Display:

1. Audio
2. Character Set

Controls:

1. [MENU] returns to main screen
2. [SET] (First time) enters Audio Edit Mode:
 - A. Starts flashing Audio Setting
 - B. Selects setting and steps to next field
3. [UP] and [DOWN] change setting that is flashing.

Guitar Mode:

When using the REV-BP as a wireless guitar system, the Bodypack transmitter and the receiver need to be set in Guitar mode for optimal performance.

In Audio Edit Screen press [UP/DOWN] to change between Voice and Guitar.

Press [SET] to save setting.

Press [MENU] to return radio to the previous state.

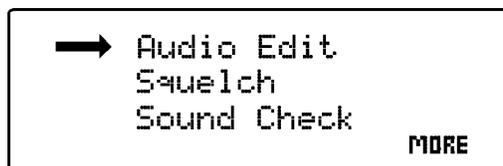


Figure 23
Audio Edit Screen


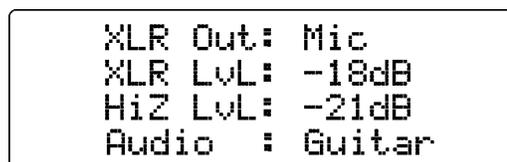


Figure 24
Audio Edit Guitar Screen

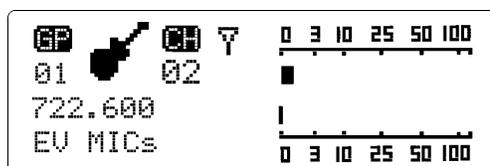

Set Squelch Threshold:

Display Mode:

Press [SET]

Controls:

1. [SET] disables tone squelch and enables edit mode (allows squelch level adjustment). Squelch level will flash in edit mode. Tone Squelch is disabled.
2. [UP] raises the squelch threshold.
3. [DOWN] lowers the squelch threshold.
4. [SET] saves the new threshold.
5. [MENU] (From edit mode) restores threshold to the setting just after the last time [SET] was pressed.

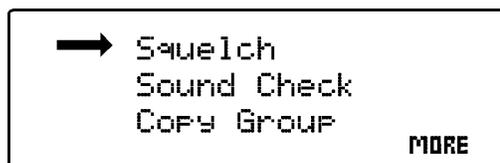


Figure 25
Squelch Screen

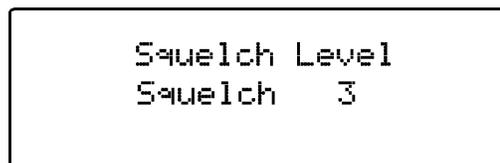


Figure 26
Squelch Edit Screen

Sound Check Screen:

Display:

1. Battery Status
2. Peak Audio level held while screen is displayed
3. Range of RF Signal Strength
4. Count Tone on or off indicator
5. Squelch Break Counter

Controls

1. [MENU] goes to next screen
2. [SET] clears screen display variables and restarts Sound Check
3. [UP] turns on the Count Beep (🔊), [DOWN] turns the beep off (🔇).
4. Press and hold [SET] shows Antenna Test

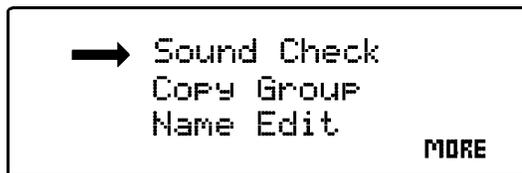


Figure 27
Sound Check Screen


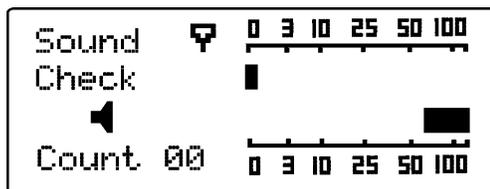


Figure 28
Sound Check Screen

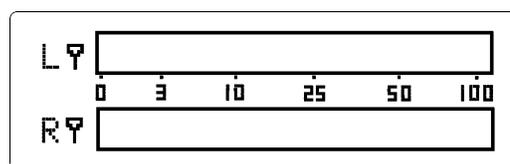

Antenna Test Screen

Copy Group

Selecting the Copy Group will copy the currently selected group to the first unused User Group.

Press [SET] to accept the group and places the unit into the Frequency Edit Screen (User Defined groups only) for editing.

Press [UP/DOWN] to select a different user group.

Press [MENU] to return radio to its previous state.

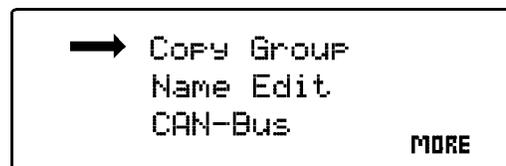


Figure 29
Copy Group Screen

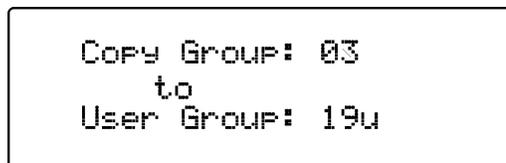


Figure 30
Copy Group Edit Screen


Clear Group:

Clear Group will delete all channels within the selected user group.


Press [SET] to clear the group, and place the unit in the Group/Channel edit screen with Group=1, Channel=1.

Group will be flashing to enable the selection of a new group.

Press [MENU] to return radio the operating screen.

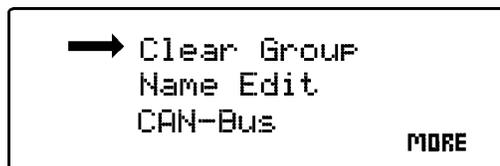

**Figure 31
Clear Group Screen**

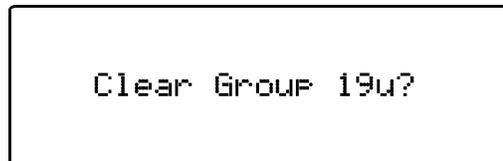

**Figure 32
Clear Group Edit Screen**


Name Edit Screen

Display

1. Microphone Name (8 characters)

Controls:

1. [MENU] cancels any unsaved changes and returns to main operating screen
2. [SET] (First time) enters Edit Mode: Starts flashing first character in Name
3. [UP] scrolls up through the available Character Set for the flashing character
4. [DOWN] scrolls down through the available Character Set for the flashing character
5. [SET] saves the currently selected character into the current character position of the Name field and advances to the next character position of the Name field
6. [SET] after the eighth character saves all changes and stops Edit Mode

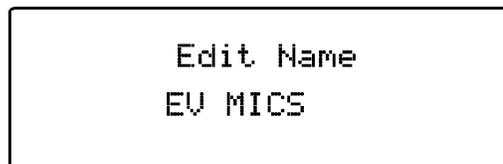

**Figure 33
Name Edit Screen**

CAN BUS Address


Selecting the CAN BUS Address function will allow you to assign a unique address for use with the REVLink and IRIS NET computer software.

Press [SET] to edit address (address will flash).


Press [UP/DOWN] to change address.

REV-Dual has two addresses tied together. The Channel 1 is always even and Channel 2 is odd.

Press [MENU] to return radio to its previous state.

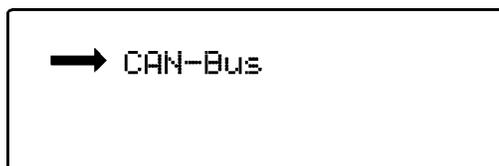

**Figure 34
Can Bus Screen**

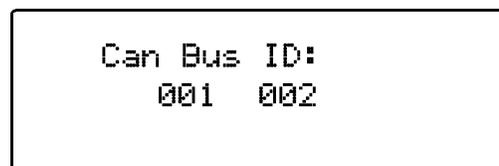

**Figure 35
Can Bus Edit Screen**

Section 5 - Transmitter Screens and Detail Functions


Transmitter Display and Controls:

Display Mode:

1. Group and Channel
2. Frequency
3. Transmitter Gain
4. RF Transmit Power
5. Bodypack only Voice/Guitar Mode

Controls:

1. Press SET once, GP will flash, use UP and DOWN to adjust
2. Press SET again to accept GP, CH will flash, adjust with UP/DOWN
3. Press SET again to accept CH and channel will be installed.
4. Press SET and DOWN at the same time to change to frequency mode
5. Press SET and use UP/DOWN to set frequency (only when the Group is set to 19u - 20u)
6. Press SET and DOWN at the same time to change to the Gain mode
7. Press SET and UP/DOWN to adjust the transmitter gain setting
8. Press SET and DOWN at the same time to change to the RF mode
9. Press SET and UP/DOWN to adjust the RF transmit power (HI or Lo)
10. Bodypack Only press SET and DOWN at the same time to change Voice/Guitar mode
11. Press SET and UP/DOWN to switch between Voice and Guitar Mode.
Note: Always place receiver in Guitar mode as well to maximize performance, see Section 3.1.9
12. Press SET and DOWN at the same time to return to Group mode
13. Press and hold UP and DOWN for 3 seconds to lock out SET
14. Press and hold UP and DOWN again to activate SET
15. Press and hold UP, DOWN and SET to lock power (see below)
16. Press and hold UP, DOWN and SET to unlock power

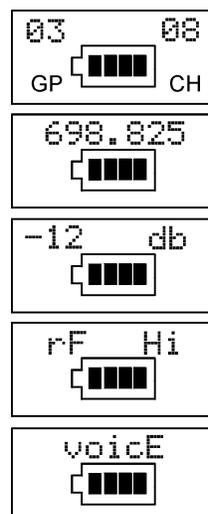

Bodypack
Only

Lockout:

Press and hold [UP]+[DOWN] for 3 seconds, the unit will not allow editing of any of the user variables: Group, Channel, frequencies, Squelch, Name, and ClearScan.

Transmitter On/Off Lock Out:

There are two On/Off lock out modes available, One Time and Every time.

One Time: Cycling the power switch 3 times in under 3 seconds and On-Loc will be displayed for a second and then return to normal operation. The power switch alone will no longer turn the unit off. To turn the unit off, put the power switch in the off position (On-Loc will be displayed) open the battery door and press [Menu], [Set], [Up] or [Down] and the unit will power down. The next time the unit is powered on the power switch will operate normally.

Section 6 - Guidelines for Best Performance

Compatibility

The transmitter and receiver must be of the same frequency band and set to the same group and channel in order to work together. The REV is available in four US frequency bands, C1, C2, C3, C5. The band information is available in the Group/Channel edit screen on the receiver, the bottom label on the handheld transmitter, and on the back panel label on the bodypack.

Using Multiple Wireless Systems

If two or more REV systems and/or other UHF/VHF wireless systems are being used in the same location, proper frequency coordination is necessary to avoid interference. All channels in the REV factory set groups are designed to work together, so if channels from just one group are used, no further coordination is required.

Contact your dealer or Telex for assistance if you are planning more than 12 systems or using the REV with other wireless equipment.

ALWAYS REMEMBER: SAME GROUP, DIFFERENT CHANNEL.

IMPORTANT NOTE: Always use the smallest preset group that meets your needs. For instance, if you want to set up 6 units, use one of the groups of 12 frequencies. The smaller the preset group, the more compatible the frequencies are.

IMPORTANT NOTE: Lo transmit power must be used for factory preset groups of 16 units working simultaneously.

Multiple Systems and Advanced ClearScan

Because all of the channels in the factory set groups are compatible, Advanced ClearScan can be used to set up multiple systems quickly and with confidence. When setting up more than one system, set up the first system using the ClearScan All function. Once the working Group has been established, leave the first transmitter on, set the next receiver Group to the working Group and run ClearScan Group.

This will provide the next clearest channel in that group. Set the transmitter to match, leave it on and repeat until all the systems are set up. If you run out of clear Channels in one group but need to set up more systems, contact your dealer or Telex for assistance in choosing additional frequencies.

Potential Sources of Interference

There are many potential sources of interference for your wireless system. Any electronic product that contains digital circuitry including digital signal processors (reverb/multi-effects units), electronic keyboards, digital lighting controllers, CD and DVD players, and computers, all emit RF energy that can adversely affect the performance of your wireless system. It is always best to place the receiver as far away as possible from these devices to minimize potential problems.

Analog and Digital Television stations can also interfere with your wireless system. The REV is designed to operate over 24MHz of RF bandwidth, which covers four TV channels. The factory presets on the REV are optimized for conditions where one, two, or possibly three of the four stations are covered in your area. If three of the four stations are used in your area, it will severely limit the number of systems that will operate together and you should be using a different band.

Battery Recommendations

Fresh 9-volt or AA Lithium-Iron batteries from a quality manufacturer will yield the best performance from your transmitters. Rechargeable 8.4-volt Ni-Cad batteries can be used but will result in much shorter operational time.

When the REV-BP or REV-PH transmitters are turned on, the red battery LED will flash once if the battery is good. If the light does not light or stays lit continuously, the battery is weak or dead. If the light comes on during use, the battery is weakening and should be replaced as soon as possible. If sound quality degrades during use, it may be the result of a weakening battery.

Caution: The battery level indicators, on the transmitters and receiver displays, are based on the use of alkaline batteries. Use of other battery types will result in false readings on these indicators although the battery low LED on the transmitters will operate normally.

Receiver and Antenna Placement

Do not place the receiver near a large metal object or surface.

Locate the receiver as close as possible to the area where the transmitter will be used. Ideally, the position of the receiver/antennas are within sight of the transmitter. When using multiple systems, do not allow antennas to cross or touch each other. For best results with multiple receivers, use an APD4+ antenna splitter (see **Antenna Connections**, page 6).

Section 7 - Trouble Shooting Guide

Problem	Possible Causes	Solutions
No audio and no display on the receiver	Receiver is off	Make sure that the power supply is properly connected and the on/off button is in the on position
No audio and no RF signal indicator on the receiver display	Transmitter is off	Turn on transmitter power switch
	Transmitter is on a different channel	Match the transmitter group and channel to the one displayed on the receiver.
	No (or dead) battery in transmitter	Insert fresh battery in transmitter
	Faulty battery contacts	Clean and or bend contact
No Audio with good RF signal indicator but no (or low) Audio indicator on the receiver display	Microphone not connected	Check the TA4F connector on the bodypack or the detachable microphone element connection on the handheld
	Low gain setting on the transmitter	Increase the transmitter gain
No (or low) Audio with good RF signal and Audio indicators on receiver display.	Receiver audio output cable is damaged or disconnected	Connect, repair or replace cable
	Gain not sufficient on mixer/pre-amp/amp input or it is muted	Increase gain on mixer or un-mute the input
	Receiver output too low	Increase the audio output setting
Distorted audio signal	Transmitter audio gain too high	Decrease the transmitter gain setting
	Receiver output too high	Decrease the receiver output setting
	Loud instrument or audio source	Change the bodypack audio mode switch to Instrument setting
	Battery level low in transmitter	Insert fresh battery in transmitter
Interference	Another REV system in the installation is on the same channel or the signals are mixing	Make sure all the channels in use are from the same group. Use ClearScan to select the clearest group. If more channels are needed call Tech Support at 800-392-3497 for coordination help.
	Another wireless product in the area is on the same frequency or the signals are mixing	Use ClearScan to change the operating frequency. If problems persist, call Tech Support at 800-392-3497 for coordination help.

Trouble Shooting Guide (Continued)

Problem	Possible Causes	Solutions
Interference (continued)	Receiver is too close to digital signal processor or similar device	Move the receiver to a different location
	Strong electromagnetic field from stage lighting or other source near the transmitter or receiver, which may be producing RF noise at or near the operating frequency.	Use ClearScan to change the operating frequency. Repair or remove the source of interference. Move the receiver to a different location.
Short range or drop-outs	RF reflective metal obstacles between the transmitter and receiver	Move the obstacles, or reposition the receiver/antennas.
	Poorly oriented beltpack antenna	Check the antenna connection and reorient the bodypack so the antenna is vertical (up and down) and facing the receiver, if possible.
	Faulty receiving antenna system	Check all antenna connections and reposition to be in line-of-sight with the transmitter
	Application requires high transmitter output	Switch the transmitter to the high power setting (see page 9 or 11)
Can't change settings on receiver or transmitter	Lockout feature is enabled	Disable lockout (see page 4, 9, or 11)
Can't change frequency setting for a channel	Channel not in a user definable group	Change to a user definable group (see page 9 or 11))
Bodypack or Handheld transmitter will not turn off, display says On-Loc	On/Off lockout is engaged	Put the on/off switch in the off position and press one of the programming buttons. See Section 4, 9, or 11 for more.

REV Receiver Specifications**Overall**

Receiver Type	Synthesized PLL
Frequency Range (RF)	C1 Band 614 - 638 MHz C2 Band 650 - 674 MHz C3 Band 674 - 698 MHz C5 Band 722 - 746 MHz D Band 798 - 822 MHz E Band 841 - 865 MHz
Number of Channels	> 900 possible channels programmable in 25 kHz steps
Modulation	FM +/- 40 kHz Deviation
Diversity	DSP Posi-Phase™ True Diversity
RF Sensitivity	<0.8 μ V for 12 dB SINAD
Image Rejection	> 60 dB
Squelch	Tone Code plus Amplitude
Ultimate Quieting	> 100 dB
Power Requirements	.90 - 240 VAC, 50 - 60 Hz
Operating Temperature	-7° to 49° C (20° to 120° F)
Dimensions	1.72 in. H x 19 in. W x 10 in. D 43.7 mm H x 482.6 mm W x 254 mm D

Audio Parameters

Frequency Response	Microphone: 80 - 15kHz +/- 2 dB Instrument: 30 - 15kHz +/- 2 dB
Balanced Out Line Level	(XLR) 20 mV-2.5 V RMS
Unbalanced Output	(HiZ) 10 mV-1.25V RMS (100k ohm load)
Distortion	<0.5% (ref 1kHz, 40kHz deviation)
Signal-to-Noise Ratio	>110dB (A)
Dynamic Range	>100dB

Transmitters REV-BP, REV-WT, REV-H, and REV-PH

Radiated Output	.5mW or 50mW Selectable
Microphone Head ElectroVoice 767A	N/D 767a supercardioid dynamic
ElectroVoice 967	N/D 967 supercardioid concert dynamic
ElectroVoice RE410	RE410 cardioid condenser
ElectroVoice RE510	RE510 supercardioid condenser
TA4F Connector Wiring	Pin 1: Ground; Pin 2: Mic Input; Pin 3: +5V bias; Pin 4: +5V bias through a 3000 Ohm resistor
Audio Gain Adjustment	Handheld 27 dB in 3dB steps Bodypack 42 dB in 3dB steps
Power Requirements	.9 Volt Alkaline Battery or Two (2) AA
Battery Life (Typical)	.8 hours with Alkaline Typical
Bodypack Antenna	Detachable 1/4 wave
Handheld Antenna	Internal
Dimensions (REV-H with RE510 head)	9.8 in. (249 mm)
(REV-PH with RE510 head)	9.9 in. (252 mm)
Dimensions (REV-BP Bodypack)	3.8 in. H x 2.38 in. W x 0.92 in. D 96.5 mm H x 60.5 mm W x 23.4 mm D
Dimensions (REV-WT Bodypack)	3.42 in. H x 2.36 in. W x 0.80 in. D 87 mm H x 60 mm W x 20.4 mm D



FCC AND INDUSTRY CANADA APPROVAL INFORMATION

The Electro-Voice/Telex Transmitters are Type Accepted under United States Federal Communications Commission CFR 47, Part 74 and Industry Canada RSS123.

The Electro-Voice/Telex Receivers are approved under United States Federal Communications Commission CFR 47, Part 15 and Industry Canada RSS210. Operation is subject to the condition that this device does not cause harmful interference.

Licensing of Electro-Voice/Telex equipment is the users responsibility and Licensability depends upon the users classification, users application and frequency selected. Electro-Voice/Telex strongly urges the user to contact the appropriate telecommunications authority for any desired clarification.

CAUTION: Any changes or modifications made to the above equipment could void the users authority to operate the equipment.

OTHER APPROVAL INFORMATION

Intended use: All models are intended to be used in a system as Professional Radio Microphones.

All products are suitable for indoor/outdoor use with suitable protection. (Products are not water-proof).

Approvals: All models are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. See below for other Declaration of Conformity information.

Licensing: Licensing of all models is the users responsibility. Licensing is different from country to country. Electro-Voice/Telex strongly urges the user to contact the appropriate licensing authority for any desired clarification.

Modifications: The user is cautioned that any unauthorized modifications to the equipment may void the users authority to operate the equipment.

DECLARATION OF CONFORMITY

Telex Communications, Inc.

Declares, under our sole responsibility, that the following products:

Model:	Description
REV-D	Dual Receiver
REV-S	Single Receiver
REV-PH	Handheld Transmitter
REV-H	Handheld Transmitter
REV-WT	Beltpack Transmitter
REV-BP	Beltpack Transmitter

Is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Certified to: ETSI EN 300 422-2 v1.1.1
 ETSI EN 301 489-9 v1.3.1

Further guidance or information can be obtained by contacting:

Telex Communications, Inc.
 ATTN: Compliance Engineer
 8601 Cornhusker Highway,
 Lincoln, NE 68507 U.S.A.
 Telephone: 1-402-467-5321
 FAX: 1-402-467-3279

Europe: Telex/EVI Audio GmbH
 Hirshberger Ring 45
 94315 Straubing
 Germany
 Phone +49 (0) 9421 706 206
 Fax +49 (0) 9421 706 378

Signed: Charles E. Conner
 Title: Senior Project Engineer
 Date: April 23, 2008

Section 10 - Factory Service**Factory Service (North America)**

If factory service is required, ship the unit prepaid in its original carton to:

EV Audio Service
c/o Telex Communications, Inc.
8601 East Cornhusker Highway
Lincoln, NE 68507-9702 U.S.A.
Tel: 402/467-5321 or 800-553-5992
Fax: 402/467-3279

Enclose a note describing the problem along with any other pertinent information and how to contact you.

Factory Service (Excluding North America)

If factory service is required, ship the unit prepaid in its original carton to:

EVI Audio GmbH
Hirschberger Ring 45
D-94315 Straubing
Telephone: +49 (0) 9421 7060
Fax: +49 (0) 9421 706 265

Enclose a note describing the problem along with any other pertinent information and how to contact you.

Warranty (Limited)

Electro-Voice products are guaranteed against malfunction due to defects in materials or workmanship for a specified period, as noted in the individual product-line statement(s) below, or in the individual product data sheet or owner's manual, beginning with the date of original purchase. If such malfunction occurs during the specified period, the product will be repaired or replaced (at our option) without charge. The product will be returned to the customer prepaid via UPS Ground.

Exclusions and Limitations: The Limited Warranty does not apply to: (a) exterior finish or appearance; (b) certain specific described in the individual product-line statement(s) below, or in the individual product data sheet or owner's manual; (c) malfunction resulting from use or operation of the product other than as specified in the product data sheet or owner's manual; (d) malfunction resulting from misuse or abuse of the product; or (e) malfunction occurring at any time after repairs have been made to the product by anyone other than Electro-Voice or any of its authorized service representatives.

Obtaining Warranty Service: To obtain warranty service, the customer must deliver the product, prepaid, to Electro-Voice or any of its authorized service representatives together with proof of purchase of the product in the form of a bill of sale or receipted invoice. A list of authorized service representatives is available from Electro-Voice.

Incidental and Consequential Damages Excluded: Product repair or replacement and return to the customer are the only remedies provided to the customer. Electro-Voice shall not be liable for any incidental or consequential damages including, without limitation, injury to persons or property or loss of use.

Other Rights (United States Only): This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Electro-Voice Wireless Systems are guaranteed against malfunction due to defects in materials or workmanship for a period of three (3) years from the date of original purchase. The Limited Warranty does not extend to cables or cable connectors. Additional details are included in the Uniform Limited Warranty Statement. Technical Assistance: 800-392-3497 (U.S. and Canada only).

		MODEL#	ORDER #
1/2 Wave Colinear Rx Antenna			
C1, C2	(614-674 MHz)	CLA-3	870658-3
C3	(674-725 MHz)	CLA-5	870658-5
C5	(722-760 MHz)	CLA-6	870658-6
D, E	(798-865 MHz)	CLA-8	870658-8
1/2 Wave Flexible Rx Antenna			
C3, C5, D, E	(680-870 MHz)	FA-500	860031
1/2 Wave Antenna Bracket w/10 ft. Coax		AB-2	71138000
1/4 Wave Rx Antenna			
C1, C2, C3, C5	(600-746 MHz)	ANU-14	879010
D, E	(730-890 MHz)	ANU-14H	879010-1
Directional Rx Antenna		(450-900 MHz)	LPA500
UHF Antenna Amplifier		(520-806 MHz)	UAA-500
Low Loss Coaxial Antenna Cable with TNC Connectors		25 ft. (7.6 M)	CXU-25
		50 ft. (15.2 M)	CXU-50
		75 ft. (22.9 M)	CXU-75
		100 ft. (30.5 M)	CXU-100
Antenna/Pwr Distribution System			
C1, C2, C3, C5	(600-780 MHz)	APD4+	301614000
D, E	(780-900 MHz)	APD4-1+	301614011
Termination Plug for APD4+ and REV-D		TP-2	650095
1/4 Wave Bodypack Tx Antenna			
C1	(Yellow, 556-638 MHz)	AN-Flex YEL	879220-3
C2, C3	(Green, 636-726 MHz)	AN-Flex GRN	879220-4
C5, D	(Red, 722-826 MHz)	AN-Flex RED	879220-5
E	(Blue, 826-930 MHz)	AN-Flex BLUE	879220-6
1/4 Wave Super-Flex Tx Antenna			
C1	(Yellow, 556-638 MHz)	AN-SFlex YEL	879538-3
C2, C3	(Green, 636-726 MHz)	AN-SFlex GRN	879538-4
C5, D	(Red, 722-826 MHz)	AN-SFlex RED	879538-5
E	(Blue, 826-930 MHz)	AN-SFlex BLUE	879538-6

	MODEL#	ORDER#
Bodypack Pouch	WP-1000	879553
Guitar Cord	MAC-G2	879526
767a Dynamic Head	RC2-767A	ACC000008D7
976 Dynamic Head	RC2-967	ACC00000D9
RE410 Condenser Head	RC2-410	ACC00000C4
RE510 Condenser Head	RC2-510	ACC000008C5
Mic Stand Adapter for REV-H	MSA-REV	880308
Mic Stand Adapter for REV-PH	MSSA	870343-Y
Omnidirectional MicroMini™ Lapel Mic	RE90TX	71753318
Unidirectional MicroMini™ Lapel Mic	RE92TX	301456000
Lightweight omni headworn Mic	RE97TX	301XXX000
Headworn Cardioid Condenser Mic	HM7	HM7

Electro-Voice®

Made in U.S.A.

MAY 2008

LIT000004TX Rev D